

CHRONOLOGIA

■ PMS 186C Size (85x54mm)

CHRONOLOGIA

INSTRUCTION MANUAL AND WARRANTY INFORMATION

P16

P1

P2

P15

AFTER SALES SERVICE CENTER
Service-center.montrichardwatch.com

 


This manufacturer's warranty does not cover:

- 1.The life of the battery
- 2.Wear and tear and aging (e.g. scratched crystal; alteration of the color and/or material of non metallic straps and chains, such as leather, textile, rubber; peeling of the plating)
- 3.Any damage on any part of the watch resulting from abnormal/abusive use, lack of care, negligence, accidents (knocks dents, crushing, broken crystal, etc.)
- 4.Incorrect use of the watch and non-observance of the use directions provided by CHRONOLOGIA.
- 5.The CHRONOLOGIA watch handled by non-authorized persons (e.g. for battery replacement, services or repairs) or which has been altered in its original condition beyond CHRONOLOGIA'S control.

Limitation of Duration of Implied Warranties

All applicable implied warranties, including the implied warranty of merchantability and of fitness for a particular purpose given to you by law are hereby limited in duration to the duration of this warranty. Under no Circumstances will CHRONOLOGIA or The MONTRICHARD GROUP be liable for any indirect or consequential damages of any kind.

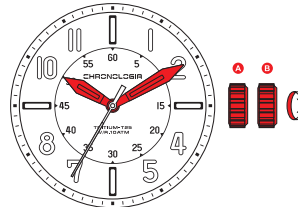


SETTING TIME

1. [A] Normal position.
2. Crown out to the [B] position.
3. Turn the crown to set hour and minute hands.
4. Push back to [A] position.

P14

 P3

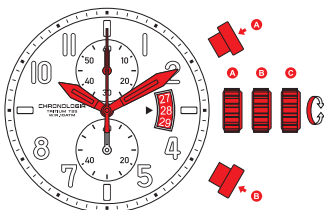

SETTING TIME & DATE

1. [A] Normal position.
2. Crown out to the [B] position.
3. Turn the crown counter-clockwise to set the date.
4. Crown out to the [C] position.
5. Turn the crown to set hour and minute hands.
6. Push back to [A] position.

MEASURING TIME

1. The chronograph can be started and stopped each time Button [A] is pressed.
2. Pressing Button [B] resets the chronograph.

Replacing the Battery

We recommend that you contact an approved CHRONOLOGIA Service Center or authorized CHRONOLOGIA retailer, as they are equipped with the tools and apparatus required to carry out the work and the necessary checks in a professional manner. A worn-out battery should be replaced immediately in order to reduce the risk of leakage and consequent damage to the movement.

Limited Warranty

Your CHRONOLOGIA watch is warranted by CHRONOLOGIA and THE MONTRICHARD GROUP for a period of twenty four (24) months from the date of purchase under the terms and conditions of this warranty. The international CHRONOLOGIA warranty covers material and manufacturing defects existing at the time of delivery of the purchased CHRONOLOGIA watch ("defects"). The warranty only comes into force if the warranty certificate is dated, fully and correctly completed, and the watch has been registered on our After Sales Service Center during the warranty period. In the event that repairs are improper to restore the normal conditions of use of your CHRONOLOGIA watch, CHRONOLOGIA and The MONTRICHARD GROUP guarantees its replacement by a CHRONOLOGIA watch of identical or similar characteristics. The warranty for the replacement watch is TWENTY FOUR (24) MONTHS after the date of purchase of the replaced watch.

P4

P13


CHRONOLOGIA

Water Resistance

- [3atm / 30m / 100ft]
Watches water resistant to 30 meters /100 feet.
- [5atm / 50m / 165ft] [10atm / 100m / 330ft] [20atm / 200m / 660ft]
Watches water resistant to 50, 100 or 200 meters /165, 330 or 660 feet.
- [10atm / 100m / 330ft] [20atm / 200m / 660ft] [30atm / 300m / 1000ft]
Watches water resistant from 100 to 300 meters / 330 to 1000 feet or more with screw down crown and diving bezel.

According to the water resistance 1, 2 or 3 listed above, watches are protected against:

- | | |
|-------|------------------------------|
| 1-2-3 | Water splashes / Rain |
| 1-2-3 | Surface swimming |
| 2-3 | Shower |
| 2-3 | Free diving / Water sports |
| 3 | Scuba diving of the surface. |

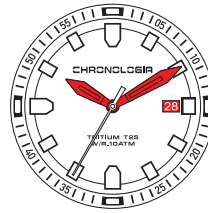 


SETTING TIME & DATE

- [A] Normal position.
- Crown out to the [B] position.
- Turn the crown counter-clockwise to set the date.
- Crown out to the [C] position.
- Turn the crown to set hour and minute hands.
- Push back to [A] position.

P12

 P5

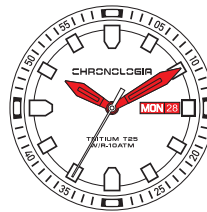

SETTING TIME, DAY & DATE

- [A] Normal position.
- Crown out to the [B] position.
- Turn the crown counter-clockwise to set the date.
- Turn the crown clockwise to set the day.
- Crown out to the [C] position.
- Turn the crown to set hour and minute hands.
- Push back to [A] position.

MANUAL WINDING

- [A] Normal position.
- Turn the crown clockwise.

Care and Checks

Clean the case and bracelet regularly using a soft cloth to prevent any corrosion caused by perspiration. All water resistant watches can be cleaned with a toothbrush and soapy water, and then dried with a soft cloth. After being worn in the sea, the watch must be rinsed with warm fresh water and then dried completely.

Water Resistance

Water resistance of watches is rated based on laboratory pressure tests comparable to a swimmer or diver sitting still at that pressure level. However many water-based activities involve a lot of movement and other environmental changes. These exceptions to how the watch was rated may challenge or defeat the water protection features of a water resistant watch. The water resistance of a watch cannot permanently be guaranteed. It may be affected by ageing of gaskets or by accidental shock to the crown. We recommend that you have the water resistance of your watch checked once a year by an authorized CHRONOLOGIA Service Center.

Never activate the time-setting crown and/or the pushers while the watch is under water and make sure that the crown has been pushed/screwed down tightly after every operation. Do not under any circumstances open the watch yourself ; arrange to get it inspected by an authorized CHRONOLOGIA Service Center only.

P6

P11

PRECAUTIONS AND PREVENTIVE MEASURES

Temperature

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures [over 60°C (140°F) or below 0°C (32°F)].

Magnetic Fields

 
Do not expose your watch to intense magnetic fields such as loudspeakers, portable telephones, computers or refrigerators and other electromagnetic appliances.

Shocks

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock please have your watch checked by an authorized modus service Center.

Harmful Products

Avoid direct contact with solvents, detergents, and perfumes, cosmetic products etc., since they may damage the bracelet, the case or the gaskets.

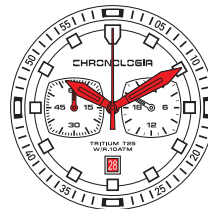

SETTING TIME & DATE

 
- [A] Normal position.
- Crown out to the [B] position.
- Turn the crown counter-clockwise to set the date.
- Crown out to the [C] position.
- Turn the crown to set hour and minute hands.
- Push back to [A] position.

MEASURING TIME

- The chronograph can be started and stopped each time Button [A] is pressed.
- Pressing Button [B] resets the chronograph.


P10

P7

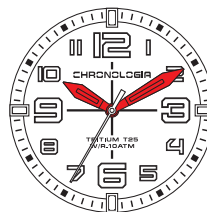

SETTING TIME

 - [A] Normal position.
- Crown out to the [B] position.
- Turn the crown to set hour and minute hands.
- Push back to [A] position.

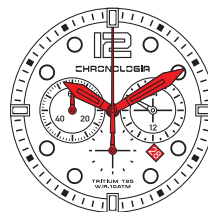

SETTING TIME & DATE

- [A] Normal position.
- Crown out to the [B] position.
- Turn the crown counter-clockwise to set the date.
- Crown out to the [C] position.
- Turn the crown to set hour and minute hands.
- Push back to [A] position.

MEASURING TIME

- The chronograph can be started and stopped each time Button [A] is pressed.
- Pressing Button [B] resets the chronograph.

P8

P9