

Hustler Vibrating Panty Battery Insertion Instructions

It is imperative that the batteries on both the bullet and the remote be inserted properly for the vibrating panties to function at an optimum level.

- Insert 3 LR44 flat batteries positive (flat) side down into the bottom of the bullet (as pictured below). Please note, if the batteries improperly inserted in the opposite direction, the bullet will still vibrate randomly, however, the remote will not communicate with the bullet. The batteries must be flat side down for the remote to communicate with the bullet properly.
- The 3 LR44 batteries must be seated squarely into the bullet receptacle for the bullet to function properly. If bullet is still not functioning, remove batteries and insert them again, making sure the flat side is down and they are not tilted.
- Insert the 23A battery into the remote putting the bottom of the battery into contact with the spring (as pictured below).

BULLET



REMOTE

