
INSTALLATION INSTRUCTIONS


PREPARING FOR INSTALLATION

AWARNING The air conditioner is heavy! Use two or more people to lift and install the unit! Failure to do so could result in back injury or other injuries.

EXHAUST COMPONENTS

The following components are used for window venting. Not all components are used for every installation.



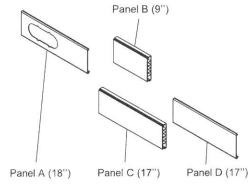

1 Window Vent Panel

3 Extension Panels

Window Installation Kit (includes 1 Window Vent Panel and 3 Extension Panels)



2 Type A Foam Seals (Adhesive)



1 Type B Foam Seal (Non-adhesive)



2 Type C Foam Seals (Adhesive type-Shorter)



Security Bracket



2 Type A Screws



1 Type B Screw




1 Type C Screw

INSTALLATION INSTRUCTIONS

SELECTION OF INSTALLATION LOCATION


- 1 Place the unit on a level floor.
- 2 For best performance, allow at least 20 in of air space on all sides of the unit for good air circulation.
- 3 Place the unit near a window. The hose and diffuser will be used to connect the air conditioner to the window installation kit to vent exhaust air outside.

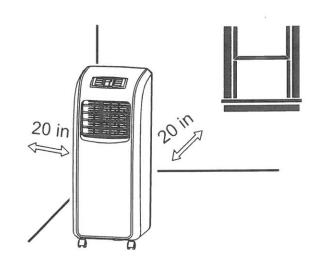


WARNING


The length of the exhaust hose is specially designed according to the specification of this product. Do not replace or extend it with your own private hose as this could cause malfunction.

ATTACHING THE HOSE AND DIFFUSER

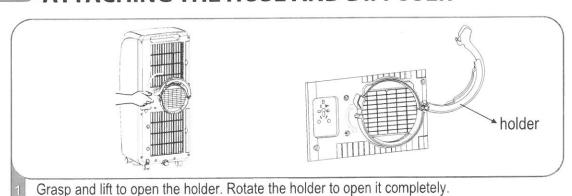

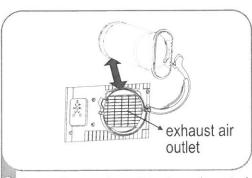

Insert the vent hose into the exhaust air outlet on the back of the air conditioner by pushing it downward.

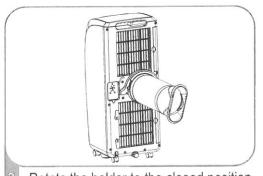

Rotate the holder to the closed position. Installation is complete.


INSTALLATION INSTRUCTIONS


WINDOW VENT PANEL AND EXTENSIONS

The window installation kit allows you to install the air conditioner in most vertical-sliding windows 18" to 50" wide, or casement-style windows from 18" to 50" high.

Panel Window Length	A 18"	B 9"	C 17"	D 17"	Fig.
18"	√				а
19" - 26"	√	√			b
27" - 34"	√		1		С
35" - 50"	√		√	√	d


- 1. Please check your window length and choose the fit panels from the above tabel.
- 2. If your window length need more than 2 panels, after adjust the length, please use type A screw to fix them.



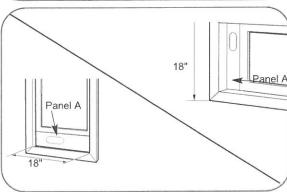


For an 18" window opening, use the window vent panel by itself.

Fig. "a"

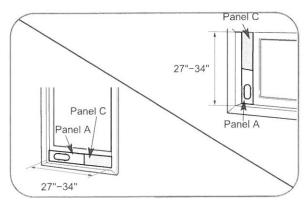


For window openings from 27" to 34", use the window vent panel (Panel A) and a extension panel (Panel C).

Fig. "c"

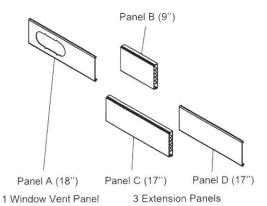


Window Installation Kit (includes 1 Window Vent Panel and 3 Extension Panels)

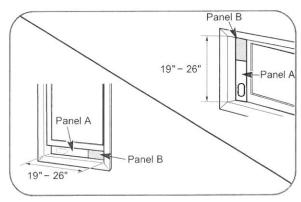

For window openings from 19" to 26", use the window vent panel (Panel A) and a extension panel (Panel B).

Fig. "b"

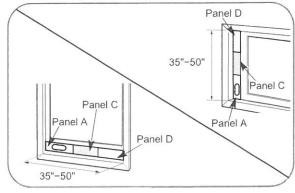

For window openings from 35" to 50", use the window vent panel and two extension panels (Panel C and Panel D).

Fig. "d"